


## "Lazy Susans" rotating tray

## Kidney

### Installation instructions

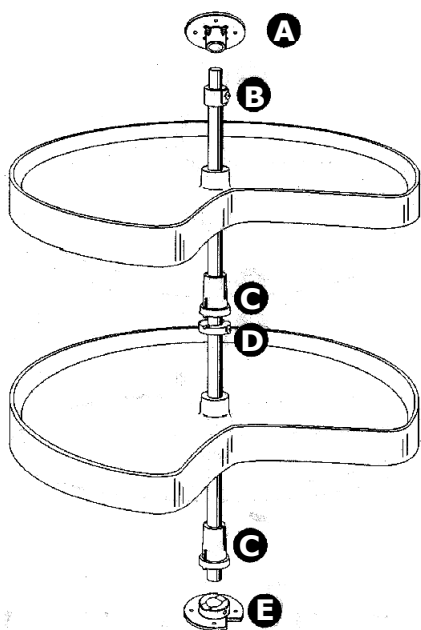

#### Content list :

- 1 telescopic chrome post with pre-installed adjustment ring **B**
- 1 supporting ring **D**
- 2 positioning supports : **A** (top) and **E** (bottom)
- 2 Kidney shelves
- 2 supporting cones **C**
- Mounting hardware
- Positioning template

#### Tools required for mounting :

- Screwdriver : Philips or square drive

#### Mounting steps - Instructions :

1. Use templates provided to install top positioning support **A** and bottom positioning support **E**.
2. Remove plastic cones **C** and support ring **D** from the chrome post.
3. Insert plastic cone through the bottom center of each shelf.  
**Note** : Make sure that you line up the wide rib with the wide slot. To ensure a proper fit, you must push the cone into the center hole until it snaps into the locked position.
4. Slide top shelf, support ring **D** and bottom shelf onto chrome post.
5. Insert chrome post into bottom positioning support **E**.
6. Insert telescoping portion of chrome post into the top positioning support. Tighten set screws **B** to secure the assembly.
7. Make sure the bottom shelf is in its resting position.
8. Fix location of top shelf by tightening set screws on support ring **D**.  
Make sure that top shelf is properly aligned with the bottom shelf before final fixing of set screws.
9. Secure chrome post inside bottom positioning support **E** by tightening the set screws.