


INSTALLATION INSTRUCTIONS

INDEPENDENTLY ROTATING KIDNEY -- 6470 SERIES SHELF SYSTEM

1. Locate with template provided and install bottom positioner on cabinet floor with four (4) 3/4" x 8 oval head screws.
 2. Locate with template provided and install upper pivot support with four (4) 1/2" x 8 truss head screws.
 3. Slide upper shelf onto shaft. Slide second positioner onto shaft and temporarily tighten screw with positioner approximately 15 inches from bottom end of shaft. Slide bottom shelf onto shaft.
 4. Slide Upper shaft assembly into upper end of shaft. Assemble locking screw. Lift upper shaft assembly to engage in upper pivot support. Tighten locking screw.
- Lift lower shelf and tighten shaft locking screw in bottom positioner assembly.

5. Adjust upper shelf positioner by grasping and supporting second positioner assembly while loosening locking screw. Rotate positioner and shelf into alignment and securely tighten locking screw.

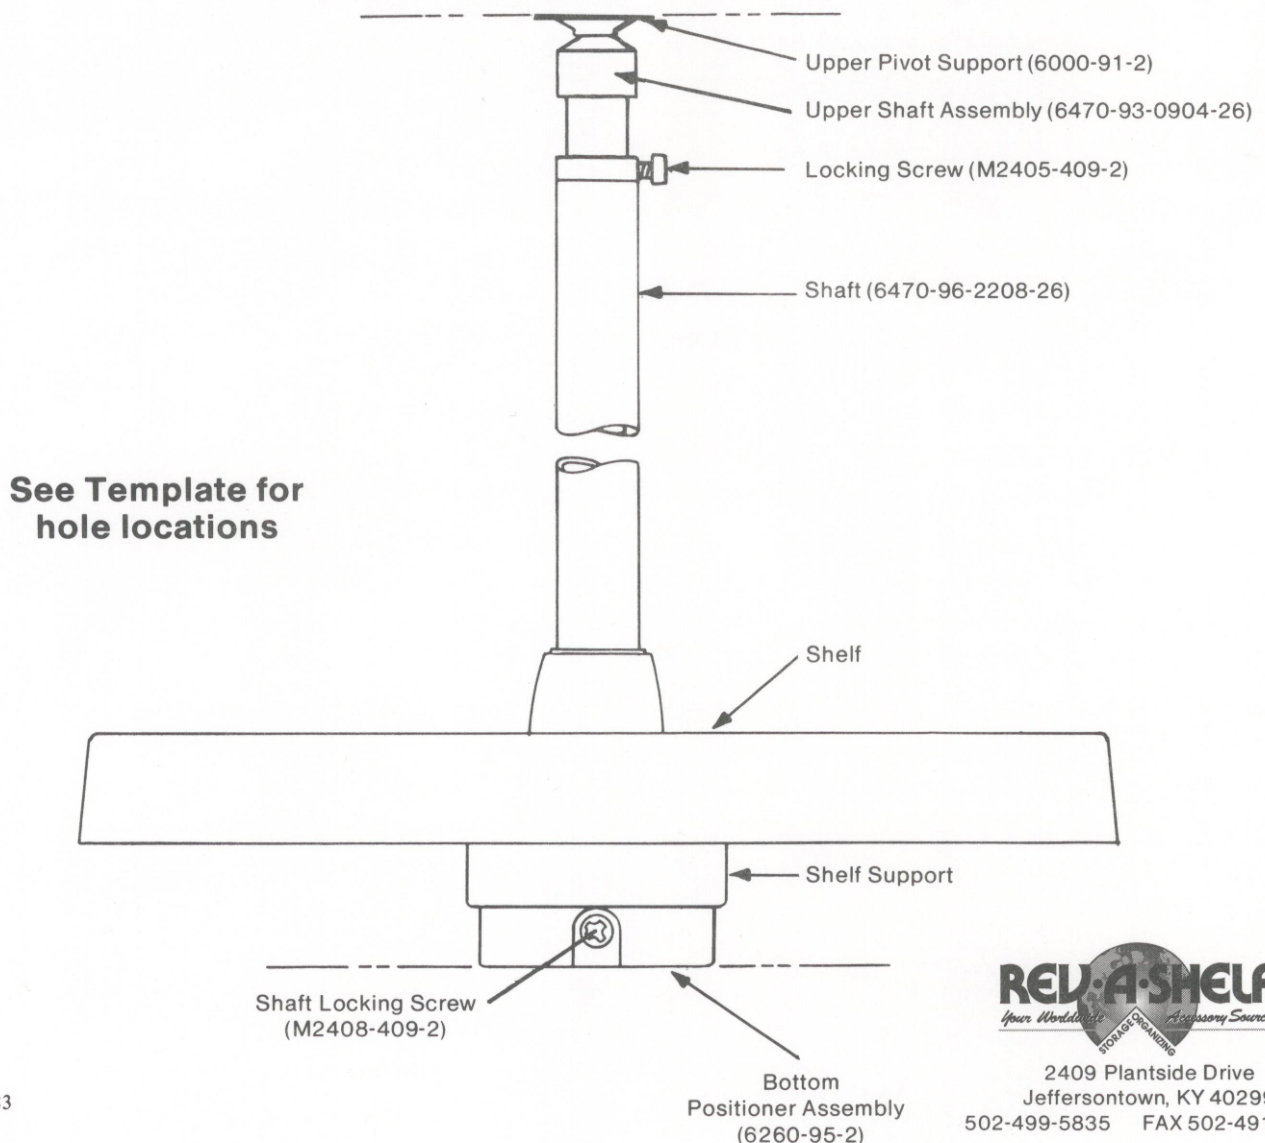

2409 Plantside Drive
Jeffersontown, KY 40299
502-499-5835 FAX 502-491-2215